

# INSTRUCTIONS FOR USE OF NSEDC/NSSP RADIO REPEATER SYSTEM

In order to connect\* to the NSEDC/NSSP radio repeater, a vessel marine Motorola radio is recommended. However, an in-house radio user may also have a Kenwood radio. All radios must be programmed to the right frequency to work.

Turn on radio and program to the following frequency:

## **Repeater A – Search & Rescue**

Rx 158.82 MHz  
Tx 153.815 MHz  
(That is a -5.005 shift)

## **Repeater B – NSEDC/NSSP Fishing Fleet**

Rx 158.22 MHz  
Tx 153.125 MHz  
(That is a -5.095 shift)

Repeater Locations: Mountain 2211 in T9S  
R21W Sec 24 of the Kateel River Meridian

---

*\*The repeater must be turned on prior to the fishing season by authorized NSSP personnel.*

***If unable to connect, please feel free to contact Norton Sound Seafood Products at (907) 443-2304 (Nome) or (907) 624-3014 (Unalakleet) for assistance.***